

## Wireless Remote Installation


On a single acting Bucher pumps -

The white wire is connected to the top bolt on the starter solenoid

The red wire is the 12V+ and goes on the bolt that's towards the back.

The black wire goes on to the relief valve.

The yellow wire screws on to the pump as a ground, where the starter solenoid is bolted on.

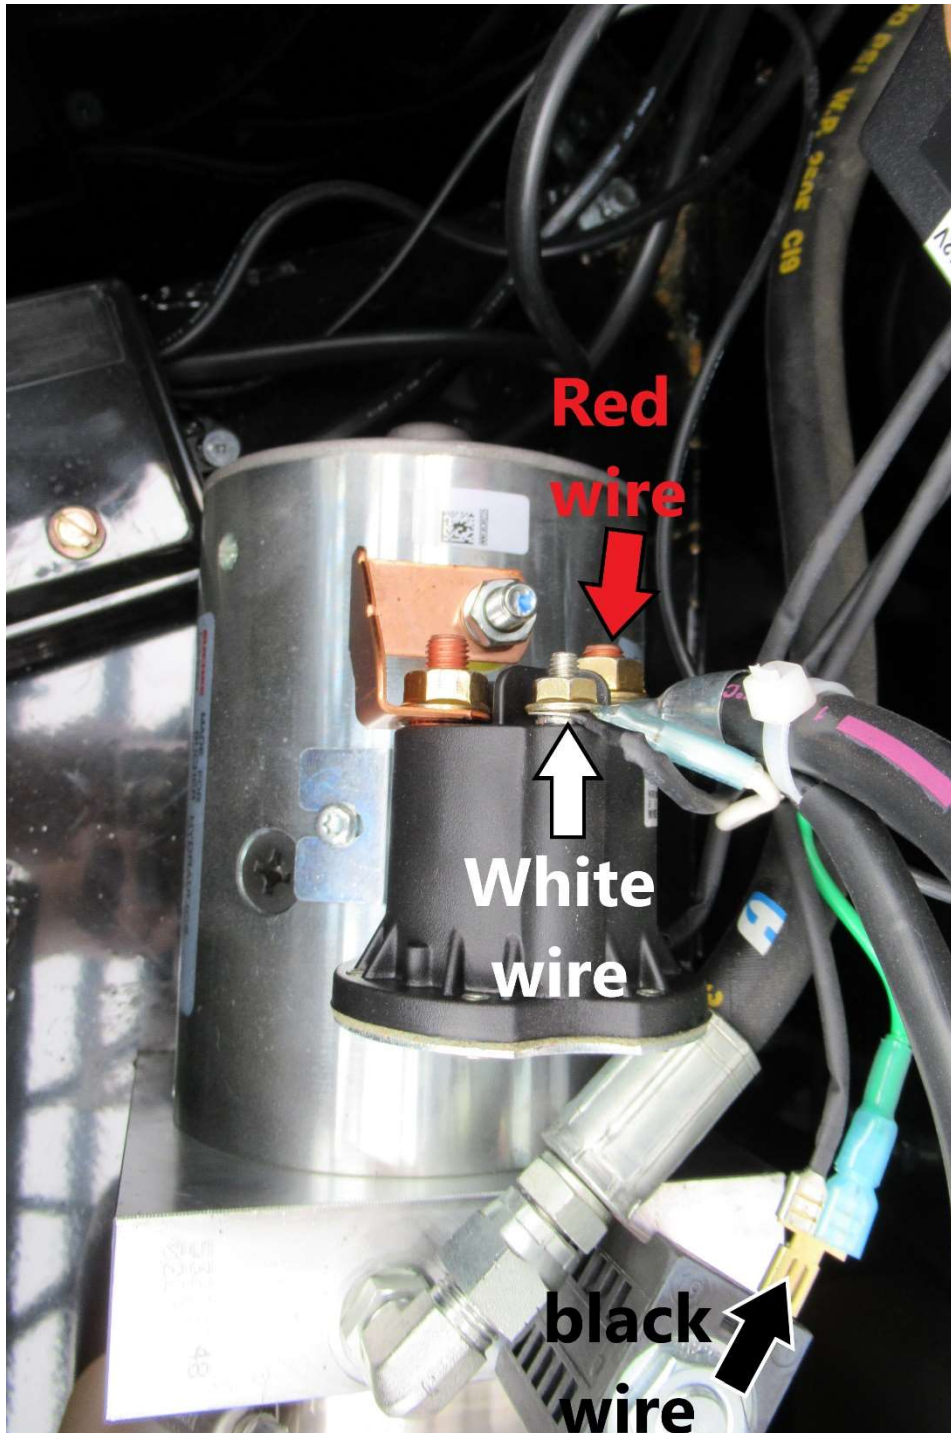

On the double acting MTE pump –

The white wire goes on the relief valve that's furthest to the back


The yellow wire goes to the front relief valve that has the manual relief on top

The black wire goes on the same relief valve just on the bottom connector


The yellow wire goes on the top connector out of the same relief valve that has the manual relief

The red wire goes on to the starter solenoid on the 12V+ bolt that is furthest to the back

The double acting pumps will also require diodes installed in the remotes

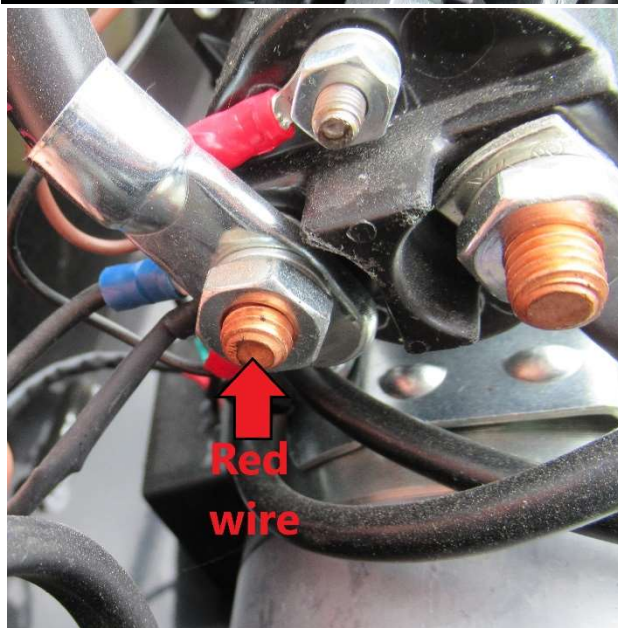


For the double acting MTE pump remote set up

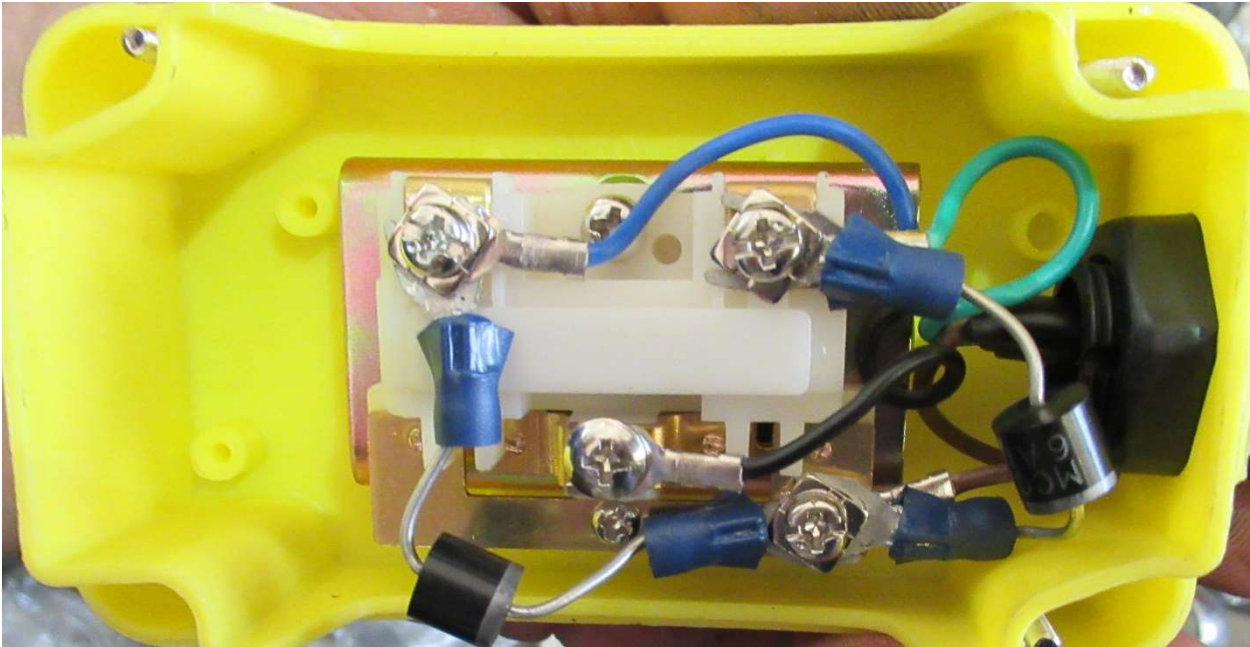



On the double acting Bucher pump –

The red wire goes on to the starter solenoid on the 12V+ bolt that is furthest to the back  
The black wire screws on to the pump as a ground, where the starter solenoid is bolted on.  
The white wire goes on the relief valve that's furthest to the front.  
The yellow wire goes on the relief valve that's furthest to the back.

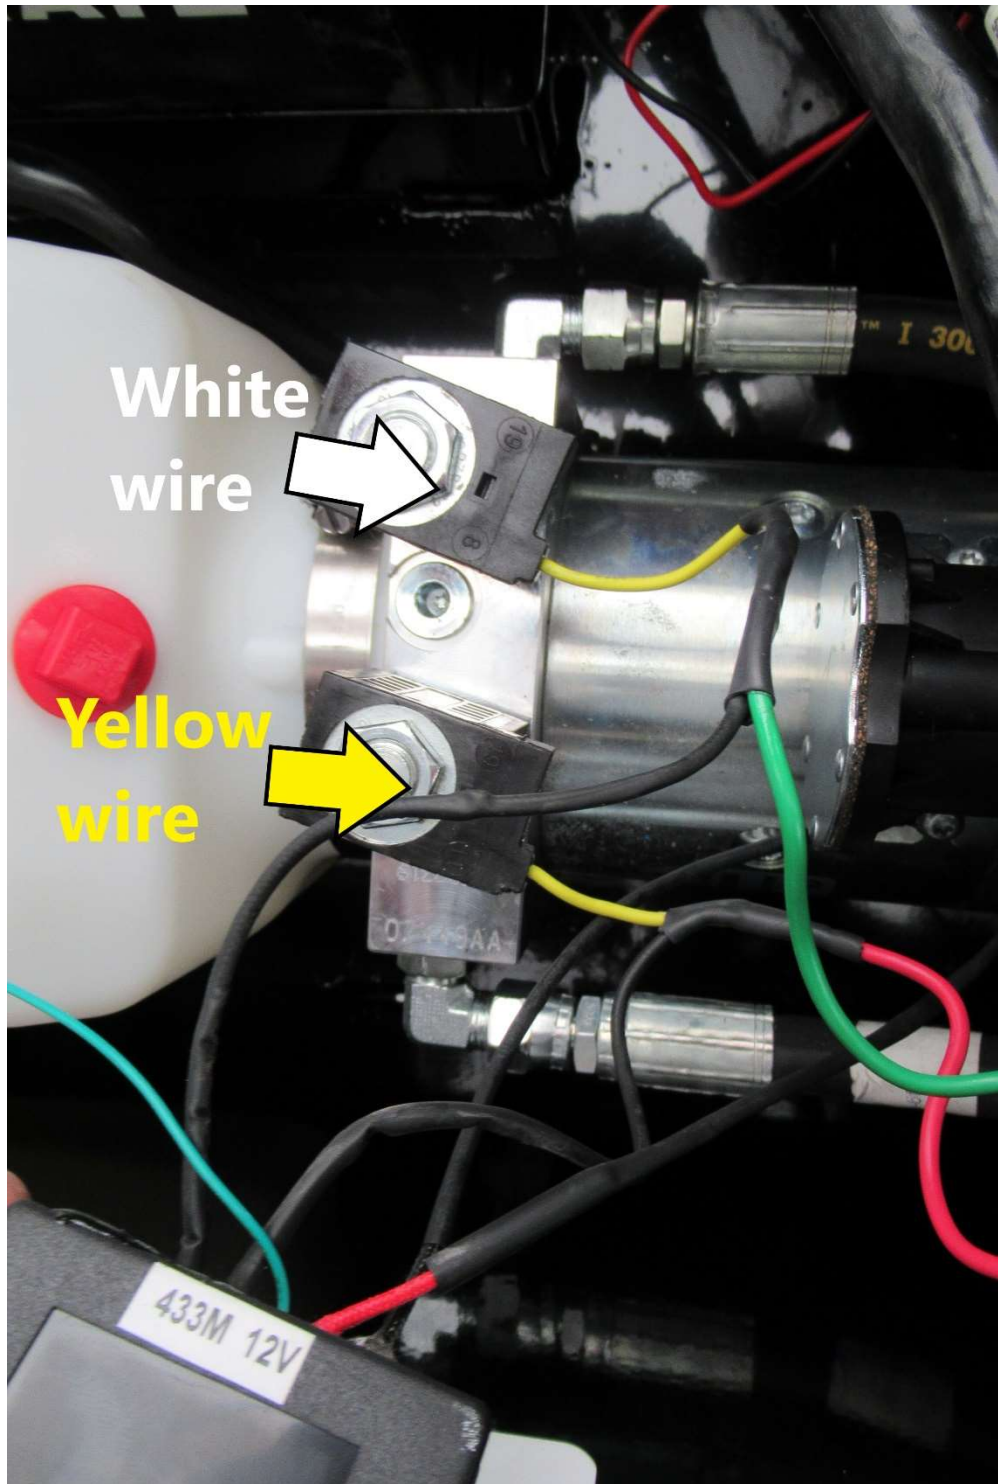

For the double acting Bucher pumps remote set up

